




CJ650B/700B1.02

SERVICE BULLETIN – Seat spring adjustment

The sprung seats on CJ650B and CJ700B models are adjustable. Adjustments to increase or decrease the spring force are made by increasing or decreasing the overall spring length to raise or lower the seat.

Increasing the overall length of the spring unit lowers seat height, and decreasing the overall spring length raises the seat.

- 1) To adjust the seat height it is necessary to remove the rear seat bolt and loosen the lock nut at the front of the spring.

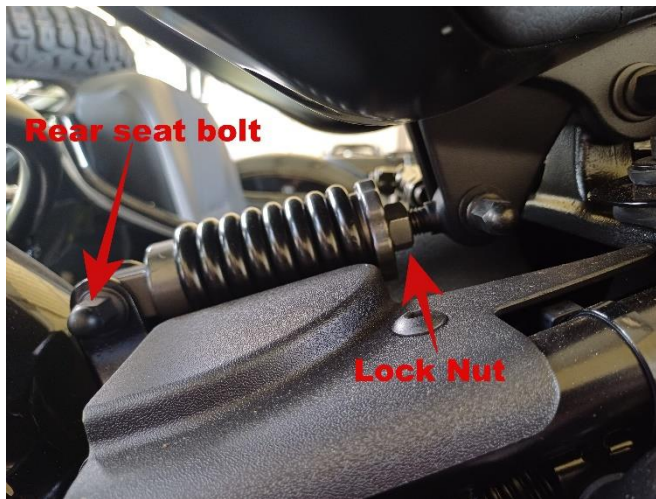

- 2) With the rear bolt removed and the front lock nut loose rotate the spring unit clockwise to decrease spring unit length, or anti-clockwise to increase spring unit length.
- 3) When decreasing the overall length of the spring unit care must be taken not to raise the seat too high as contact with the fuel tank must be avoided.

