



CJ650B/700B SERVICE BULLETIN – Spare Wheel removal/Re-fit

To carry out wheel changes/rotations it is necessary to remove and then replace the spare wheel from the spare wheel carrier. The following describes the procedure.

- 1) To remove the spare wheel retainer a tool is provided in the toolkit. Simply locate the pins in the tool and unscrew the retainer in an anticlockwise direction..



- 2) When the spare wheel is removed take note of the position of the locating pin recess in the carrier and the matching slot in the rubber cushion.



- 3) NB: take note of the locating pin screwed into the disc brake attaching bolt hole. This pin must be removed from the spare wheel and fitted to the wheel being put back on the sparewheel carrier. When refitting the wheel to the carrier ensure the pin is located in the spare wheel locating slot.





- 4) Refit the spare wheel to the carrier, replace the spacer cover and re-tighten the retainer using the tool from the tool kit.

